


PC-SPRINT

PARTS LIST and DIAGRAM

(NOT TO SCALE)

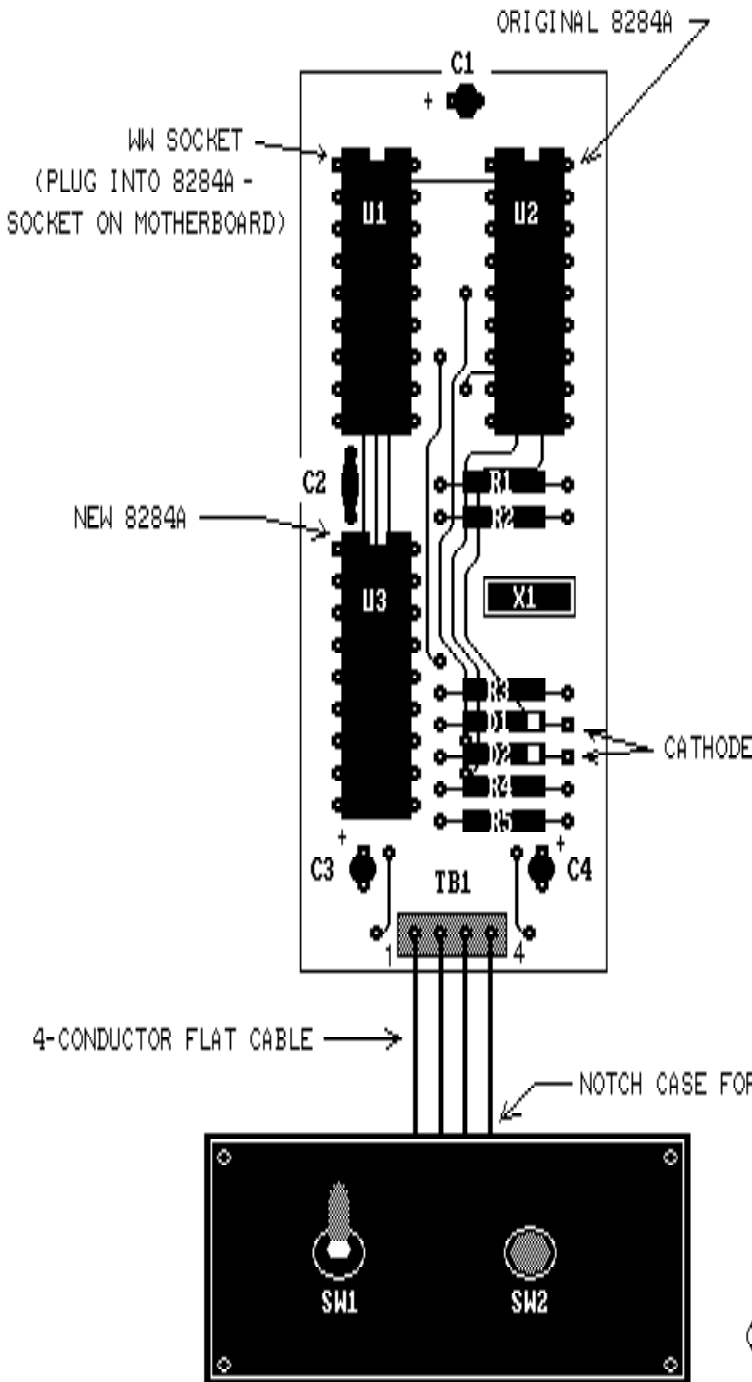

RESISTORS (ALL 1/4 W)

R1,R2 - 560 OHM
 R3 - 3.3K
 R4,R5 - 10K

CAPACITORS

C1,C3,C4 - 10 uf 16v TANTALUM RS# 272-1436
 C2 - .01 uf CERAMIC DISK RS# 272-131

DIODES

D1,D2 - 1N914/1N4148 SWITCHING RS# 276-1620

IC'S

U2,U3 - INTEL 8284A CLOCK GENERATOR
 U4 - INTEL 8088-2 8mhz PROCESSOR (NOT SHOWN)

CRYSTAL

X1 - 22.11 mhz HC/18 CASE - SEE TEXT

MISC.

U1 - 18 PIN WIRE WRAP SOCKET OR HEADER PINS - SEE TEXT
 TB1 - 4 CONDUCTOR TERMINAL STRIP RS# 276-1389
 SW1 - SPDT TOGGLE SWITCH RS# 275-326
 SW2 - NORMALLY OPEN PUSH BUTTON SWITCH RS# 275-1549
 SWITCH MOUNTING CASE RS# 270-230
 SOLID 4 COND. FLAT CABLE - LENGTH TO SUIT RS# 278-757
 SOLDERTAIL SOCKETS FOR U2 & U3 (18 PIN) RS# 276-1992

RADIO SHACK (RS#) PART #'S GIVEN FOR REFERENCE ONLY

REPLACE ORIGINAL 5 mhz 8088 WITH 8 mhz EQUIVALENT

© Douglas A. Severson 11/85

