

Note: To run the Setup Utility you will need to type at the MS-DOS prompt:

SETUPTL2       press <ENTER>

You will see the following screen:

|  |         |            |
|--|---------|------------|
| VIDEO DISPLAY  | COLOR   | MONOCHROME |
| AUTOMATIC PROMPT FOR DATE AND TIME   | NO      | YES        |
| MEMORY DIAGNOSTICS ON START-UP   | NO      | YES        |
| PRIMARY START-UP DEVICE  | ROM     | DISK       |
| INITIAL START-UP PROGRAM   | MS-DOS  | DESKMATE   |
| COMPUTER SPEED   | FAST    | SLOW       |
| INTERNAL RS-232 PORT ADDRESSES   | PRIMARY |            |
| NUMBER OF DISK BUFFERS (2-17)  | 10      |            |
| MAXIMUM # OF OPEN FILES (8-23)   | 10      |            |
| CHECK FOR CONFIG.SYS ON DRIVE  | C:      |            |
| CHECK FOR AUTOEXEC.BAT ON DRIVE  | C:      |            |
| DISKETTE DRIVE A DESIGNATION   | TOP     | BOTTOM     |
| ESC TO QUIT, F1 TO UPDATE.   USE   AND   TO MOVE,   AND   TO CHANGE<br>F10: FACTORY SETTINGS |         |            |

(jej-05/11/94) □