



BOARD LAYOUT

CONFIGURATION SETTINGS

You do not need to change the configuration settings (jumper settings) of the computer unless the installation procedure for an option specifically instructs you to do so. Read this section if you need to change a configuration setting.

JUMPERS

FEATURE	DESCRIPTION	JUMPER SETTING
Monitor Type	Software selection by	E11 and E12 installed

	Setup*	
	Color	E10 and E11 installed
	Monochrome	E10,E11,E12 no connection
BIOS ROM Type (256KB)	Do not change, reserved for factory use*	E22 and E23 no connection E24 and E25 installed
IDE IOCHRDY	Enabled*	E1 and E2 installed
	Disabled	E1 and E2 no connection
IDE DIAG	Normal operation*	E3 and E4 no connection
	Diagnostic mode	E3 and E4 installed
I/O Recovery	Enabled*	E8 and E9 installed
	Disabled	E8 and E9 no connection
System Timing	Do not change, reserved for factory use*	E14 and E15 installed E17 and E18 installed E19 and E20 installed
*Indicates factory setting		