

The built-in 84-key keyboard has five groups of keys:

- F (function) keys
- Special function keys
- Typewriter keys
- Direction keys
- Numeric keys

F (Function) keys - usually program-specific.

Although their functions usually depend on the program you are running, some of these keys perform special functions (when pressed in combination with the FN key) as soon as you start the computer.

FN + KEYPAD	Turns the keypad area on and off
FN + F1	Changes the video hatching patterns and gray scales on the built in display; maximum of 32 configurations available.
FN + F2	Selects the built-in display or an external monitor.
FN + F3	Changes the CPU speed between 12 MHz and 6 MHz.
FN + F4	Places the harddrive into standby mode. A request for information on the hard drive will reactivate the drive.
FN + F7	Places the built-in display into standby mode. Press any key to reactivate the display.
FN + F10	Places the system in standby mode. Press any key to reactivate the system.

Special Function keys - Perform the general functions indicated on the keys.

Typewriter keys - Feature auto-repeat. When you hold down a character key, the character repeats automatically until you release the key.

Direction keys - Control the movement of the cursor (the marker on the screen). Pressing a direction key moves the cursor one character position in the direction of the arrow. Holding down a cursor key repeats the action.

Numeric keys - Pressing FN + KEYPAD enables and disables the numeric keys located at the keypad area. The keypad is the group of typewriter keys with numbers and arrows printed on the faces and characters printed on the tops. To use the numbers, press NUM LOCK. To use PG UP, PG DN, END, HOME, and the direction keys, leave the NUM LOCK key off.

Attaching an External Keyboard:

1. Plug the optional keyboard into the keyboard connector in the back of the computer.
2. If the optional keyboard has XT and AT switch settings, choose AT.

3. The external keyboards NUM LOCK can be activated automatically at startup. Run the SETUP_28 utility and select ON from the NUM LOCK option.

Note: Refer to Faxback Doc. # 1848 for information on using the Setup Utility.

(jej-05/10/94)