



Note: Dip Switches are located under the serial interface compartment cover at the printer's top, right-back corner.

**Power Switch:**

Rock the switch backward to turn ON the DMP-136. Rock the switch forward to turn OFF the printer.

**Paper Selector:**

Pull the paper selector forward to select tractor feed paper, or backward for single sheet paper.

**Control Panel:**

One Menu switch and four selection buttons allow the user to custom configure options on the DMP 136. Faxback Document # 4027 will provide specific instructions on using the control panel.

**Paper Adjustment Knob:**

Used to make adjustments to the print start position. Clockwise to advance the

paper, counterclockwise to retract the paper.

Color Ribbon Adjustment:

Used to adjust the Color Ribbon tracking. If colors run together or the wrong color is printed, this adjustment will correct the print head/color ribbon alignment. Faxback Document # 4029 will provide additional information on color ribbon adjustment.

Dip Switches:

SW-1

IBM MODE

EPSON MODE

Switch	OFF	ON	Switch	OFF	ON		
1 Emulation	---	IBM *	1 Emulation	Epson	---		
2 Character Set	Set 1 *	Set 2	2 Character Set	Italic	Graphic		
3 Slash Zero	NO *	YES	3 Slash Zero	NO	YES		
4 Auto LF	NO *	YES	4 Auto LF	NO	YES		
5 Auto CR	NO *	YES	5 Skip Over	NO	YES		
6 Code Page	See table below		6 Country	See table below			
7 Code Page			7 Country				
8 Code Page			8 Country				
Country (code)	6	7	8	Country	6	7	8
USA * (437)	OFF	OFF	OFF	USA	OFF	OFF	OFF
Multilingual (850)	ON	OFF	OFF	France	ON	OFF	OFF
Portuguese (860)	OFF	ON	OFF	Germany	OFF	ON	OFF
French Canadian (863)	ON	ON	OFF	England	ON	ON	OFF
Norwegian (865)	OFF	OFF	ON	Denmark I	OFF	OFF	ON
Scandinavian	ON	OFF	ON	Sweden	ON	OFF	ON
				Italy	OFF	ON	ON
				Spain	ON	ON	ON

SW-2

Switches	OFF	ON
1 Font Selection	See Font Table	
2 Font Selection		
3 Form Length	See Form Length Table	
4 Form Length		
5 Top of Form	1 inch *	9/16 inch

6 Reserved	DO NOT CHANGE	
7 Print Direction	Uni-direction *	Bi-direction
8 Color	Not Installed *	Installed

Font Table	1	2	Form Length Table	3	4
Draft	OFF *	OFF *	11 inches	OFF *	OFF *
Roman	ON	OFF	12 inches	ON	OFF
Sans Serif	OFF	ON	11.66 inches	OFF	ON
Courier	ON	ON	8 inches	ON	ON

Faxback Document # 4025 will give detailed information on setting the DIP switches.

(dtc-08/06/93)

□