

You can customize your printer's functions to meet your special needs. The menu settings have three directories: MAIN, I/F, AND EMULATION (HPLJ3, IBM, EPSON). When you install the optional PDL cartridge, the PDL menu also appears. This section gives a brief explanation of each of the menu items and their possible settings. The asterisk (*) indicates the factory setting for a menu item.

HPLJ III Directory Menu:

MENU	SETTINGS	DESCRIPTION
FONT SOURCE	I*	Selects the default font source. I: Internal C: Cartridge S: Downloaded
FONT NUMBER	000* n	Selects the default font. The range of font numbers in the menu is determined by the font source selected.
PITCH	0.44 10.00* 99.99	Selects the CPI (This setting only appears if a selected scalable typeface with fixed spacing is applicable.) The increment unit is 0.01 CPI.
PT.SIZE	4.00 12.00* 999.75	Selects the point size. (This setting appears only if a selected scalable typeface is applicable.) The increment unit is 0.25 point.
ORIENTATE	PORT* LAND	Selects the orientation of a page, PORTRait or LANDscape.
FORM	005 060* 064 128	Selects lines per page. The line pitch (LPI) is determined by selecting the number of lines per inch. If you set DIP Switch to OFF (Europe), the default is 64.
SYMBOL	ROMAN 8* ECMA-94 PC-8 PC-8DN PC-850 ISO2 ISO4 ISO6 ISO10 ISO11 ISO14 ISO15 ISO16	Selects the symbol sets. You can select from 24 symbol sets.

ISO17
ISO21
ISO25
ISO57
ISO60
ISO61
ISO69
ISO84
ISO85
GERMAN
SPANISH

Using the Menu:

Menu settings are stored in the printer's memory even after you turn off power and they remain unchanged until you reprogram them. Use the keys on the operation panel to program the functions. The setting you can change flashes on the display.

1. With the printer off line, press FUNCTION to enter the menu programming mode.
2. Press UP ARROW or DOWN ARROW so the directory name you wish to change flashes on the display.
3. Press SET to enter the menu select mode. The first menu item flashes.
4. Press UP or DOWN ARROW so the menu item you want to change flashes on the display.
5. Press SET to enter the change setting mode. The current setting flashes.
6. Press UP or DOWN ARROW until the setting you want flashes on the display.
7. Press SET to return to the menu select mode. The menu item flashes.

If necessary, repeat Steps 4 to 7 to program other settings.

8. Press FUNCTION to exit the menu programming mode.
9. Press CONTINUE/RESET to store the new settings into memory.

Note: The PAPER SET, MANUAL FEED, and THICK PAPER functions become valid without pressing CONTINUE/RESET. If you changed only these functions, you do not need to press CONTINUE/RESET.

(dte-08/06/93)

(smm 08/24/93)