

When an error occurs, the ON/OFF LINE indicator and the QUIET indicator blink, and the LED's corresponding to the error are turned on.

Error Chart:

Alarm Name	ON/OFF Line	Quiet	LQ	12	17	PS	Corrective Action
CPU Alarm	Blink	Blink				On	Reset Printer. If problem is not corrected, send unit in for service.
ROM Alarm	Blink	Blink		On		On	
ROM Alarm	Blink	Blink		On	On		
RAM Alarm	Blink	Blink		On	On	On	
Head Home Error	Blink	Blink	On				
Spacing Error	Blink	Blink	On			On	
Overrun Error	Blink	Blink	On		On		
Software/Data Command Error	Blink Blink Blink Blink	Blink Blink Blink Blink	On On On On	On On On On	On On	On On	Reset Printer. Restart print job.
Overheated Head Overheated LF/Space Motor	Blink Blink						Wait for print head/motor to cool.
Autoload Jam Paper Out	Blink Blink						Check paper, Reload if needed