

(Epson FX-286e emulation)

DEC.	HEX.	SYMBOL	FUNCTION
7	(07)	BEL	Buzzer
8	(08)	BS	Backspace
9	(09)	HT	Horizontal Tab
10	(0A)	LF	Line Feed
11	(0B)	VT	Vertical Tab
12	(0C)	FF	Form Feed
13	(0D)	CR	Carriage Return
14	(0E)	SO	Double Width by Line
15	(0F)	SI	Set Condensed Print
17	(11)	DC1	Select Printer
18	(12)	DC2	Cancel Condensed Print
19	(13)	DC3	Deselect printer
20	(14)	DC4	Cancel Double Width by Line
24	(18)	CAN	Cancel Data
27	(1B)	ESC	Double Width by Line
14	(0E)	SO	
27	(1B)	ESC	Set Condensed Print
15	(0F)	SI	
27	(1B)	ESC	Set Intercharacter Space
32	(20)	SP	
n	n	n	
27	(1B)	ESC	Master Select
33	(21)	!	
n	n	n	
27	(1B)	ESC	Cancel MSB Control
35	(23)	#	
27	(1B)	ESC	Set Absolute Print Position
36	(24)	\$	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	DLI Font Select

37	(25)	%	
n	n	n	
27	(1B)	ESC	Define user-defined characters
38	(26)	&	
0	0	NUL	
n1	n1	n1	
n2	n2	n2	
d0	d0	d0	
d1	d1	d1	
d2	d2	d2	
27	(1B)	ESC	Select Graphics Mode
42	(2A)	*	
m	m	m	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Select Underline
45	(2D)		
n	n	n	
27	(1B)	ESC	Vertical Tab Channel
47	(2F)	/	
n	n	n	
27	(1B)	ESC	Set 1/8" Line Spacing
48	(30)	0	
27	(1B)	ESC	Set 7/72" line Spacing
49	(31)	1	
27	(1B)	ESC	Set 1/6" Line Spacing
50	(32)	2	
27	(1B)	ESC	Set n/216" Line Spacing
51	(33)	3	
n	n	n	
27	(1B)	ESC	Select Italic
52	(34)	4	
27	(1B)	ESC	Cancel Italic
53	(35)	5	
27	(1B)	ESC	Printable code area expansion
54	(36)	6	
27	(1B)	ESC	Cancel printable code area expansion
55	(37)	7	
27	(1B)	ESC	Ignore paper end
56	(38)	8	
27	(1B)	ESC	Cancel Ignore paper end
57	(39)	9	

27	(1B)	ESC	Copy ROM to RAM
58	(3A)	:	
0	(00)	NUL	
0	(00)	NUL	
0	(00)	NUL	
27	(1B)	ESC	Set Unidirectional by Line
60	(3C)	<	
27	(1B)	ESC	Set MSB to 0
61	(3D)	=	
27	(1B)	ESC	Set MSB to 1
62	(3E)	>	
27	(1B)	ESC	Reassign Graphics Mode
63	(3F)	?	
n	n	n	
m	m	m	
27	(1B)	ESC	Initialize Printer
64	(40)	@	
27	(1B)	ESC	Set variable line feed
65	(41)	A	(n/72")
n	n	n	
27	(1B)	ESC	Set Vertical Tab Stops
66	(42)	B	
n1	n1	n1	
0	(00)	NUL	
27	(1B)	ESC	Set Page Length in lines
67	(43)	C	
n	n	n	
27	(1B)	ESC	Set Page Length in inches
67	(43)	C	
0	(00)	NUL	
n	n	n	
27	(1B)	ESC	Set Horizontal Tab Stops
68	(44)	D	
n1	n1	n1	
0	(00)	NUL	
27	(1B)	ESC	Set Emphasized Mode
69	(45)	E	
27	(1B)	ESC	Cancel Emphasized Mode
70	(46)	F	
27	(1B)	ESC	Set Double-Strike
71	(47)	G	
27	(1B)	ESC	Cancel Double-Strike
72	(48)	H	

27	(1B)	ESC	Printable code area expansion
73	(49)	I	
n	n	n	
27	(1B)	ESC	Variable Line Feed (n/216")
74	(4A)	J	
n	n	n	
27	(1B)	ESC	Single Density Graphic
75	(48)	K	
n1	n1	n1	
n2	n2	n2	
27	(1B)	ESC	Double Density Graphic
76	(4C)	L	
n1	n1	n1	
n2	n2	n2	
data		data	
27	(1B)	ESC	Select 12 CPI
77	(4D)	M	
27	(1B)	ESC	Set Skip Over Perforation
78	(4E)	N	
n	n	n	
27	(1B)	ESC	Cancel Skip Over Perforation
79	(4F)	O	
27	(1B)	ESC	Set 10 CPI
80	(50)	P	
27	(1B)	ESC	Set Right Margin
81	(51)	Q	
n	n	n	
27	(1B)	ESC	Set International Character
82	(52)	R	
n	n	n	
27	(1B)	ESC	Set Super-/Subscript
83	(53)	S	
n	n	n	
27	(1B)	ESC	Cancel Super-/Subscript
84	(54)	T	
27	(1B)	ESC	Set/Reset Unidirectional
85	(55)	U	
n	n	n	
27	(1B)	ESC	Set/Reset Double Width
87	(57)	W	
n	n	n	
27	(1B)	ESC	High Speed Double Density Graphic

89	(59)	Y	
n1	n1	n1	
n2	n2	n2	
data	data	data	
<hr/>			
27	(1B)	ESC	Quadruple Density Graphic
90	(5A)	Z	
n1	n1	n1	
n2	n2	n2	
<hr/>			
27	(1B)	ESC	Set Relative Position
92	(5c)	\	
n1	n1	n1	
n2	n2	n2	
<hr/>			
27	(1B)	ESC	Select 9-pin graphics mode
94	(5E)	^	
m	m	m	
n1	n1	n1	
n2	n2	n2	
<hr/>			
27	(1B)	ESC	Set Vertical Tabs in channel
98	(62)	b	
m	m	m	
n1	n1	n1	
0	(00)	NUL	
<hr/>			
27	(1B)	ESC	Variable reverse line feed execute
106	(6A)	j	(n/216")
n	n	n	
<hr/>			
27	(1B)	ESC	Set Left Margin
108	(6C)	l	
n	n	n	
<hr/>			
27	(1B)	ESC	Proportional Mode On/Off
112	(70)	p	
n	n	n	
<hr/>			
27	(1B)	ESC	Quiet printing mode On/Off
115	(73)	s	
n	n	n	
<hr/>			
27	(1B)	ESC	Select Character Table
116	(74)	t	
n	n	n	
<hr/>			
27	(1B)	ESC	Double Height printing On/Off
119	(77)	w	
n	n	n	
<hr/>			
27	(1B)	ESC	Select NLQ or Draft mode
120	(7B)	x	
n	n	n	
<hr/>			