

DIP Switch Functions in TANDY MODE.
 (Switch 1 is set to OFF)

SW	Symbol	ON	OFF
1	Control Codes		Tandy Codes
2	CR	Carriage Return Only (CR=CR)	Carriage Return and Line Feed (CR=NL)
3	LF	Line Feed Only (LF=LF)	Line Feed and Carriage Return (LF=NL)
4	Form Length	12 Inches	11 Inches
5	1-inch Skip Perforation	Valid	Not Valid
6	Line Spacing	1/8 Inch	1/6 Inch
7	Character Set	IBM Character	Tandy Character
8	WP/DP Mode	Word processing Mode	Data processing Mode

Switch 9 and Switch 10 select the interface and baud rate for serial interface.

Interface	Baud Rate	Switch	
		9	10
Parallel		OFF	OFF
Serial	600	OFF	ON
Serial	1200	ON	OFF
Serial	2400	ON	ON

DIP Switch Functions in IBM mode.
 (Switch 1 is set to ON)

SW	Symbol	ON	OFF
1	Control Codes	IBM Codes	
2	CR	Carriage Return Only (CR=CR)	Carriage Return and Line Feed (CR=NL)
3	LF	Line Feed Only (LF=LF)	Line Feed and Carriage Return (LF=NL)
4	Form Length	12 Inches	11 Inches
5	1-inch Skip	Valid	Not Valid

Perforation			
6	Line Spacing	1/8 Inch	1/6 Inch
7	Character Set	IBM Character Set 1	IBM Character Set 2
8	Buffer Full	Carriage Return and Line Feed	Carriage Return Only

Switch 9 and Switch 10 select the interface and baud rate for serial interface.

Interface	Baud Rate	Switch	
		9	10
Parallel		OFF	OFF
Serial	600	OFF	ON
Serial	1200	ON	OFF
Serial	2400	ON	ON

(smm 07/26/93)