

| Jumpers | Default | Possible Settings |
|------------------|---------|---------------------|
| DMA Channel | 1 | 1, 2, or 3 |
| IRQ Level | 3 | 2, 3, 4, 5, 6, or 7 |
| I/O Base Address | 300h | 0 - 3FFH |
| Transceiver | BNC | BNC, DIX |

When you test a reconfigured 3C501 board, you might need to include one or more of the following parameters:

1. [I] tests for interrupts on INT 5. Include this parameter if you changed the IRQ
2. [D] uses DMA channel 3. Include this parameter if you changed the DMA
3. [-D] does not use the DMA channel at all
4. [Bxxx] sets the base address of the EtherLink board to xxx (three hexadecimal digits). Include this parameter if you change the I/O address

For example, if you changed the I/O, the IRQ, and the DMA, you would type:

```
A> 3C501 L I D [Enter]
```

```
TRANSCEIVER SELECT JUMPER
```

If you are connecting standard Ethernet cable, instead of Thin Ethernet cable, you must move the transceiver select jumper and install an Adaptor Plate (supplied with the board).

(DTC/jlc-03/28/94)

□