



Contrast: Adjust this control for the proper contrast level.

Brightness: Adjust this control for overall brightness of the display screen.

Power ON/OFF: To turn on the VGM-450, press POWER. The POWER indicator lights. Press POWER again to turn off the monitor.

Horizontal Size: Adjust this control for the desired width of the display. Turn clockwise to widen the display or counterclockwise to narrow it.

Horizontal Position: Adjust this control for the proper horizontal position of the display. Turn clockwise to move the display to the right or counterclockwise to move it to the left.

Side Pincushion: Adjust this control to correct vertical lines of the display from bowing out or in. Turn clockwise to make the display's vertical lines curve out or counterclockwise to make them curve in.

Vertical Size: Adjust this control for the desired vertical size of the display. Turn clockwise to increase the vertical size of the display or counterclockwise to decrease it.

Vertical Position: Adjust this control for the proper vertical position of the display. Turn clockwise to move the display up or counterclockwise to move it down.

CAUTION: If the same characters or graphics are shown for a long time with the contrast and brightness controls set to their maximum positions, part of the screen might be damaged. Use the controls with care.