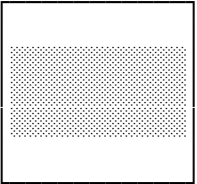
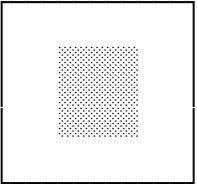
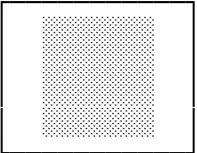
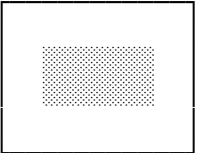
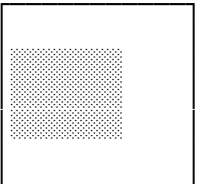
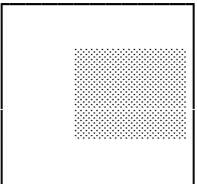
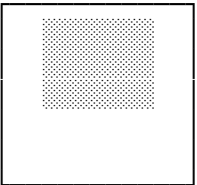
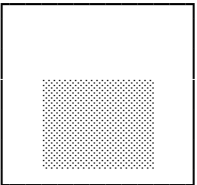
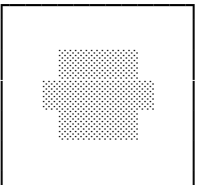
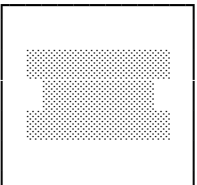


The chart below is a list of common screen problems and the adjustment needed to provide a normal display. Faxback Document # 6095 will provide information on all monitor controls and adjustment functions.

<p>Condition</p> <p>Picture too wide</p> 	<p>Control Usage</p> <p>Push Function button to light the H-SIZE LED.</p> <p>Push DOWN button to decrease H-SIZE.</p>	<p>Condition</p> <p>Picture too narrow</p> 	<p>Control Usage</p> <p>Push Function button to light the H-SIZE LED.</p> <p>Push UP button to increase H-SIZE.</p>
<p>Condition</p> <p>Picture stretched vertically</p> 	<p>Control Usage</p> <p>Push Function button to light the V-SIZE LED.</p> <p>Push DOWN button to decrease V-SIZE.</p>	<p>Condition</p> <p>Picture shortened vertically</p> 	<p>Control Usage</p> <p>Push Function button to light the V-SIZE LED.</p> <p>Push UP button to increase V-SIZE.</p>
<p>Condition</p> <p>Picture shifted to the left</p> 	<p>Control Usage</p> <p>Push Function button to light the H-POSITION LED.</p> <p>Push DOWN button to move image to the CENTER.</p>	<p>Condition</p> <p>Picture shifted to the right</p> 	<p>Control Usage</p> <p>Push Function button to light the H-POSITION LED.</p> <p>Push UP button to move image to the CENTER.</p>
<p>Condition</p> <p>Picture shifted upward</p> 	<p>Control Usage</p> <p>Push Function button to light the V-POSITION LED.</p> <p>Push DOWN button to move image to the CENTER.</p>	<p>Condition</p> <p>Picture shifted downward</p> 	<p>Control Usage</p> <p>Push Function button to light the V-POSITION LED.</p> <p>Push UP button to move image to the CENTER.</p>
<p>Condition</p> <p>Vertical sides are not straight</p> 	<p>Control Usage</p> <p>Push Function button to light the SIDE-PIN LED.</p> <p>Push DOWN button to straighten the Side line.</p>	<p>Condition</p> <p>Vertical sides are not straight</p> 	<p>Control Usage</p> <p>Push Function button to light the SIDE-PIN LED.</p> <p>Push UP button to straighten the Side line.</p>

(rjs-06/29/93)