



FRONT OF THE COMPUTER

- | | |
|--|---|
| <ul style="list-style-type: none"> 1. Expansion Adapter Slot 2. CMOS RAM Battery 3. Video Memory Chip Sockets, Pin 1 4. Audio Input Source | <ul style="list-style-type: none"> 8. Video Interrupt Jumper E14, E15 9. On-Board Video Enable Jumper E11, E12, E13 10. Diskette Drive Connector 11. Smartdrive Connector |
|--|---|

- Jumper E24, E25, E26
- 5. Audio Output Source
Jumper E28, E29, E30
- 6. Monitor Type Jumper
E19, E20, E21
- 7. VGA BIOS Mode Jumper
E16, E17, E18

- 12. Math Coprocessor
Socket, Pin 1 (^)
- 13. Smartdrive Activity
Indicator Jumper
E22, E23
- 14. SIMM Sockets