


DIP Switch Function in Tandy Mode

DIP Switch A Setting


No.	Function	ON	OFF
1	Control Codes		Codes for Tandy
2	WP/DP Mode	Word-Processing Mode	Data-Processing Mode
3	Char. Select	IBM Character	TANDY Character
4 5 6	Character Style Select	(See Character Style Select — Table 3.)	
7	CR Code	Carriage Return only	Carriage Return and Line Feed
8	LF Code	Line Feed & Carriage Return	Line Feed only

DIP Switch B Setting

No.	Function	ON	OFF
1	Form Length	12 Inches	11 Inches
2	Line Spacing	1/8 Inch LF	1/6 Inch LF
3	1 Inch Skip	Perforation Skip 1 inch	Skip Invalid
4	Buzzer	Does Not Sound	Sounds

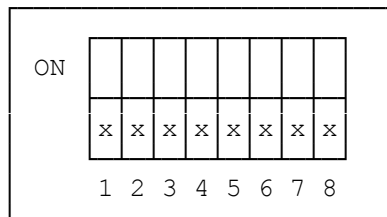

Switch A

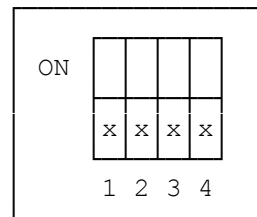

Switch B


FIGURE 10. PRINT FUNCTION (DIP) SWITCHES IN TANDY MODE

DIP Switch Function in IBM Mode


DIP Switch A Setting

No.	Function	ON	OFF

1	Control Codes	Codes for IBM	
2	Char. Set 1/2	Character Set 2	Character Set 1
3	Not Used	—	—
4	Character Style Select	(See Character Style Select — Table 3.)	
7	CR Code	Carriage Return only (CR = CR)	Carriage Return & Line Feed (CR = NL)
8	LF Code	Line Feed & Carriage	Line Feed only

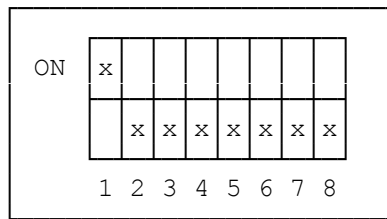

Switch A

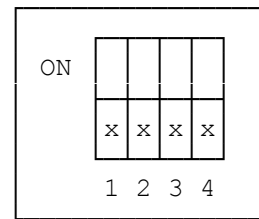

Switch B

PRINT FUNCTION (DIP) SWITCHES IN IBM MODE

CHARACTER STYLE SELECTION

SW.A-4	SW.A-5	SW.A-6	CHARACTER STYLE
OFF	OFF	OFF	Standard Character 10 CPI
ON	OFF	OFF	Standard Character 12 CPI
OFF	ON	OFF	Standard Character 17.1 CPI
ON	ON	OFF	Correspondence Character 10 CPI
OFF	OFF	ON	Correspondence Character 12 CPI
ON	OFF	ON	Proportional Character
OFF	ON	ON	Compressed Proportional Character
ON	ON	ON	Standard Character 10 CPI

DMP-2200 (26-1279)

SETTING PRINT FUNCTION (DIP) SWITCHES

There are 12 switches located on the left side of the operation panel,

under the top cover. These switches allow you to customize some of the DMP-2200 features for your own applications.

When you set switch 1-1 to OFF before turning the DMP-2200's power ON, the DMP-2200 selects Tandy codes. In this setting, the switches function as shown in Table 1. On the other hand, if you set switch 1-1 to ON, the DMP-2200 selects codes for IBM. In this case, the switches function as shown in Table 2. For instance, in Tandy mode, you can select word processing mode (better print quality) or data processing mode (faster printing speed).

When you receive the DMP-2200, all DIP switches should be set to OFF (in the DOWN position).

REMEMBER! The Printer must be OFF before you change any of the switches.

(dte-07/26/93)